

Maintenance recommendations:

After use (every time)

- **Wear full protective gear during maintenance.**
- **Always act according to the safety instructions as supplied with each tool!**

Necessary equipment: Hydraulic oil, WD40, soft cloth



**Step 1**

- Check general condition of the pump
- Check for traces of oil leakage
- Clean pump if necessary
- Check if the pump handle lock mechanism unlocks when pressing the pump handle down



**Step 2**

- Check coupler(s) and dust cap(s) for dirt and/or oil leakage
- Clean coupler(s) with a clean and soft cloth, if necessary with water and soap
- Check function coupler(s)
- If necessary grease with WD40
- Reconnect loose dust cap(s) to coupler(s)



**Step 3**

- Check the oil level with pump in upright position, coupler pointing down
- Oil level should be like indicated



**Step 4**

- If necessary fill oil
- Remove filler cap at the back of the pump
- Supply oil till oil level is halfway of the sight glass