

Maintenance recommendations:

After use (every time)

- Wear full protective gear during maintenance.
- Always act according to the safety instructions as supplied with each tool!

Necessary equipment: Teflon lubrication oil, soft cloth



Step 1

- Check that the wedge blades are not completely closed
- Check general condition of the tool (clean/dry of the tool with a soft cloth).
- Lightly oil steel parts with preservative oil WD-40 before storing.



Step 3

- Check wedge blades for:
- -deformation/ upsetting.
- -not more than 30% of the teeth surface is flattened.
- -Whether the tip is not more than 2mm out of alignment.

Step 5

- lubricate moving parts with a small amount of Teflon spray.
- After lubricating, open and close the wedge one time.




Step 2

- Check if the control slide:
- -Operates smoothly.
- -When in 0-position the wedge doesn't crawl.
- -The wedge movement is according the control symbols.



Step 4

- Check carrying handle for damage and that it's firmly fastened to the tool.
- Replace handle when damage interferes with it's function.
- Check the functioning of the integrated lights.

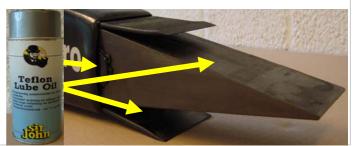

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com